




Note: Waterstop ARDEX WPM 1955 is installed into cold pour construction joints. Waterstop ARDEX WPM 1955 requires minimum 80mm of reinforced concrete coverage installed with ARDEX RA 88 or ARDEX RA 84 adhesive or concrete nails. If waterstop is over hydrated replacement is required before concrete pour.

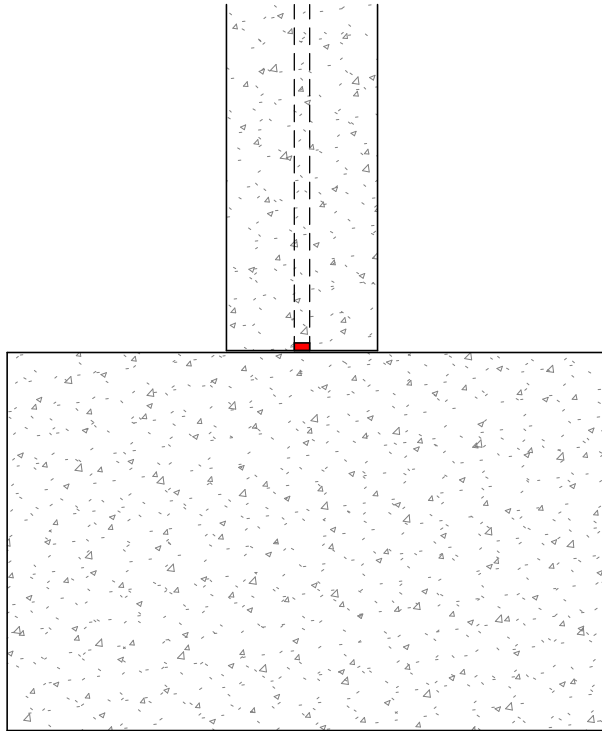


INSITU Poured WALL

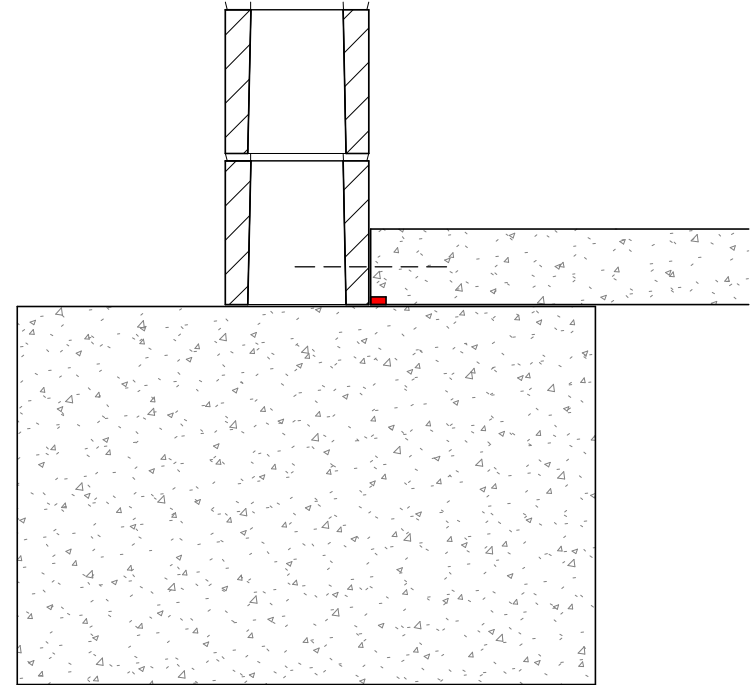

PRECAST OR MASONRY WALL TO SLAB

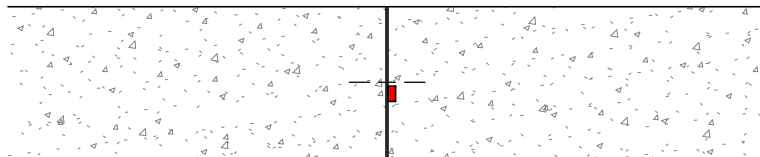

SLAB COLD POUR JOINT

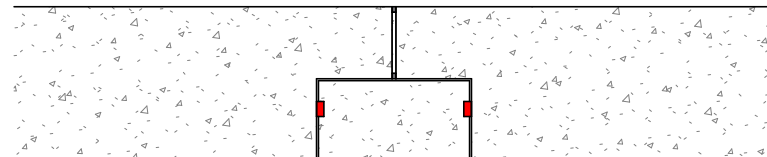

PRECAST PANEL STITCH JOINT

ARDEX TANKING

COLD POUR JOINT
SHEET TITLE

DWG NO. **ATT-14**

DATE 21/08/2020

SCALE As indicated



Disclaimer: Ardex makes every reasonable effort to ensure that the technical details, recommendations and other information contained in this drawing are accurate and represent our knowledge and experience at the time of design and publication. Ardex reserves the right to change the information without prior notice. Ardex provides the information in good faith with no representations or warranties (whether implied or otherwise), and will not be liable for any losses or damages (whether direct, indirect or consequential) whatsoever, whether in contract, negligence or any other action, arising out of or in connection with the use, or inability to use, the information.
It is your responsibility to ensure that our products are used only for the purposes for which they are intended and are used in accordance with any applicable specifications, guidelines, standards, codes of practice, regulations and laws. The supply of our products and services are also subject to certain terms, warranties and exclusions which are available on request.