
NOTE:

ALL JOINTS BETWEEN SUBSTRATE SHEETS OF PLYWOOD SHOULD BE TAPED TO PREVENT STRESSING OF THE ARDEX BUTYNOL IN CASE OF MARKED TIMBER MOVEMENT

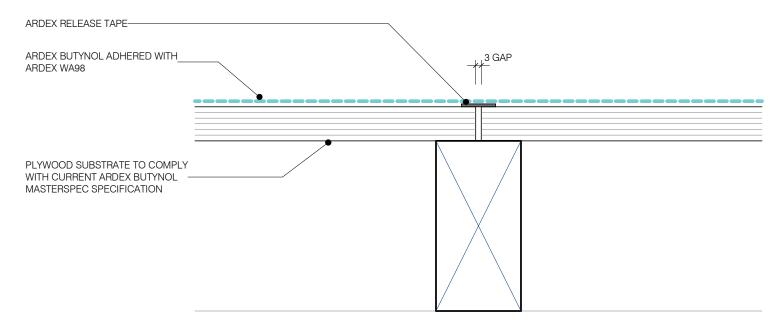

ARDEX BUTYNOL

TAPING SUBSTRATE

DWG NO. AB-20

DATE 05/04/2019 SCALE 1:2 @ A4

