



STEP #1

UltraPly TPO Unsupported Flashing
to Field Fabricated Inside Corner

UltraPly TPO Unsupported Flashing

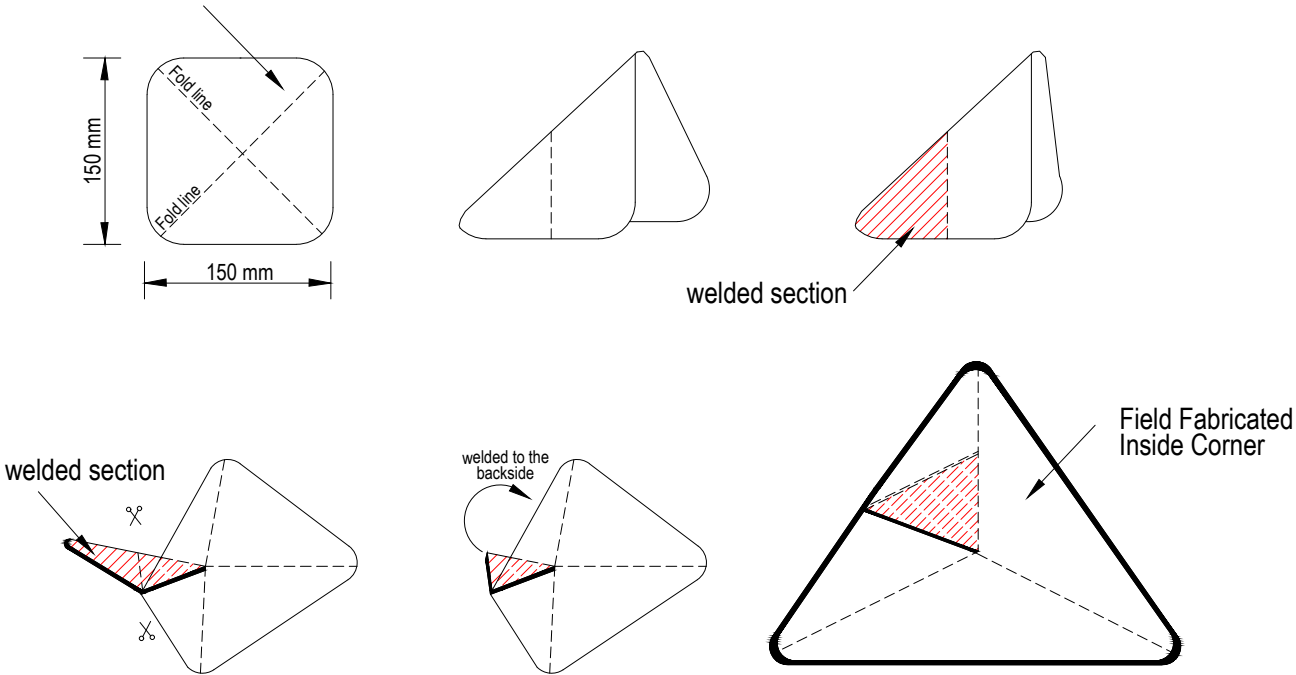

STEP #2

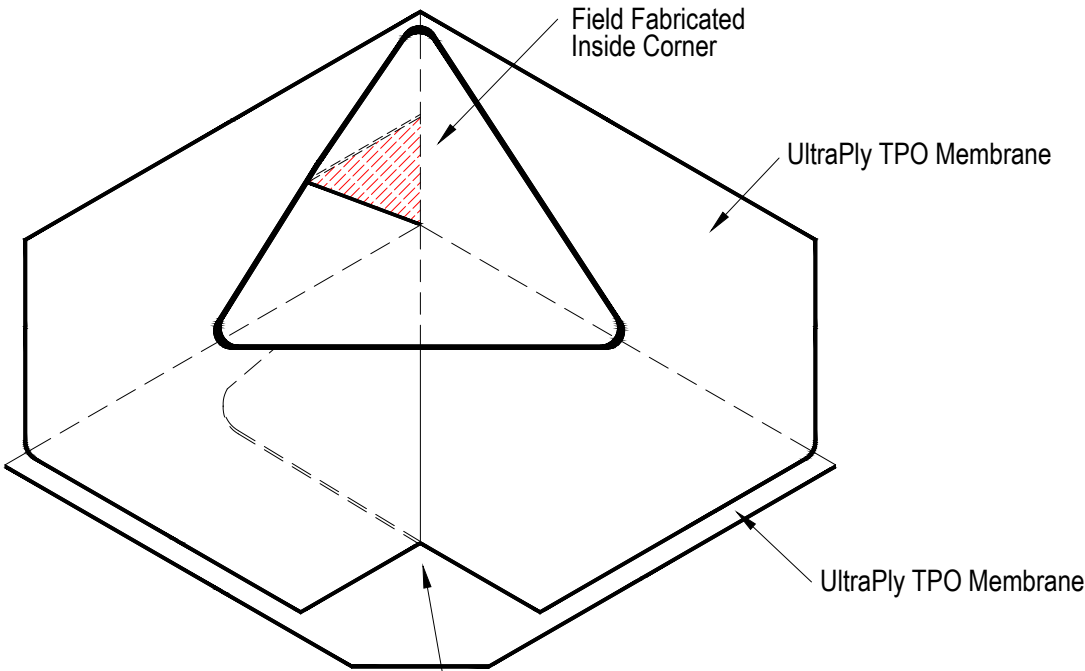

Note: UltraPly TPO Unsupported Flashing (or T-joint cover) for membrane thickness of 1.5mm or more