


ARDEX UD 150

THIN LAYER UNDERTILE DRAINAGE MAT




Before starting the ARDEX UD 150 installation steps below it's important to familiarise yourself with the product datasheet, check falls have been achieved correctly and the substrate has been prepared to specifications. If needed, repair or patch any irregularities.


1. Install appropriate ARDEX external waterproofing membrane as per product datasheet.

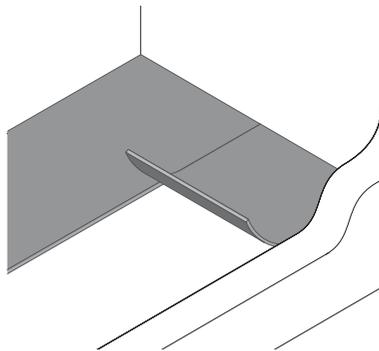


2. Measure and cut ARDEX UD 150 matting to achieve the correct fit, placing mat with seams butted.

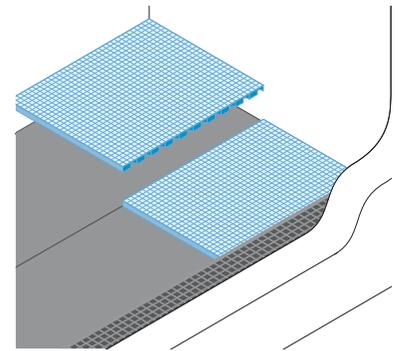

3. Install ARDEX UD 158 tape to join and reinforce all butted seams.

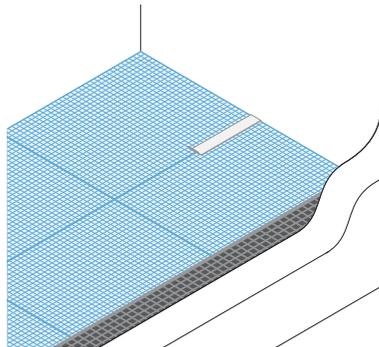


4. Commence with tiling using an appropriate ARDEX tile adhesive. Use a flat trowel to skim a coat of tile adhesive to the top mesh of ARDEX UD 150 ensuring that mesh is fully covered before troweling adhesive with a minimum notch size of 12mm.

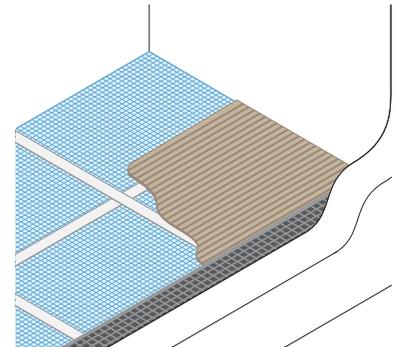


5. Install tiles in accordance with AS 3958.

Ensure 100% coverage of adhesive on the back of the tile by back-buttering the tile before laying.

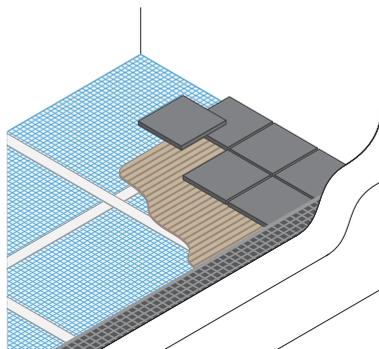

6. Install ARDEX Grout in accordance with the relevant datasheet. Ensure ARDEX Grout Booster used.

Install movement joints as per AS 3958 - at a maximum distance of 3m apart.

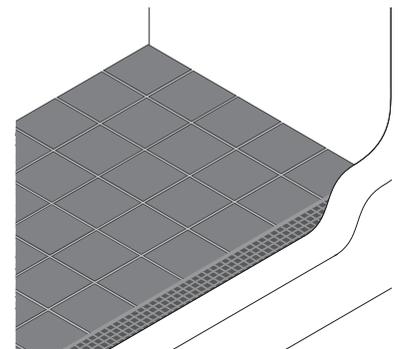

To find out more call 0800 227 339 or visit www.ardex.co.nz

Download the ARDEX app



search for: 'ARDEX New Zealand'

